



BRIO 2







BRIO 2.0 combines performance and lighting quality. Design revisited. High and low articulated doucle arm with clamping screws for optimal adjustment of the product. Very good diffusion of light on the worktop thanks to its elongated head for optimal visual comfort. ON/OFF switch located on the stand for easy access.



- Lighting: its elongated head allows optimal light diffusion on the worktop.
- Adjustment: arm with a double high and low articulation allowing optimal adjustment of the product.
- Contemporary design: with its dynamic and modern lines, this lamp fits perfectly
 to all office sizes.
- Comfortable light for the eyes: with its latest generation LED, the light is stable without flickering or glare. Protects your eyes well
- Office lamp using the latest generation LED, saving energy: it has a lifetime of 50 000h


2 years warranty

Maximum height: 57 cm / minimum height: 25 cm Materials: ABS plastic base, arm and head



Professional replaceable light source (LED only)

Characteristics

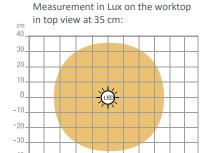


> 500 Lux

-50 -40 -30 -20 -10


< 500 Lux

40 50 cm

Measurement in Lux on the worktop in profile view at 35 cm:

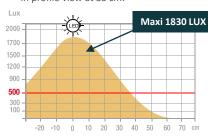

Measurement in nanometers of the light spectrum

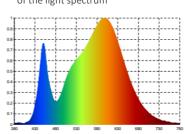




SAP no.	400093669
EAN code	3595560014736
Colors	Black
Luminous flow	837
Lux at 35cm	1830
Lm/W	84
Color T° (K)	3500
CRI	82
Source Lifetime (h)	50 000
Energy consumption (kWh/1000 h)	10
USB Port	No
Inductive charger	No
Net weight (kg)	1,56



OUR CSR COMMITMENTS

- 1. All our lighting are 100% repairable thus limiting planned obsolescence.
- 2. Reduce our carbon footprint through our **ECO-DESIGN THINKING** approach.
- 3. Contribute to the preservation of the planet's natural resources by promoting the use of **recycled materials**.
- 4. Optimize our packaging to control our **transport costs**.
- 5. Highlight the **talent of our employees** by ensuring social equality.

Energy class




OUR EXPERTISE ____

1-Why use auxiliary lighting?

We are regularly subjected to constant artificial lighting in the office, which takes no account of our biological rhythms. Poor lighting quality can cause headaches, sleep disorders and loss of concentration. According to a recent study, only 34% of offices achieve the level of illumination of 500 lux recommended by Occupational Medicine in accordance with DIN EN 12464-1*.

2-How to light your workspace?

- Position the lamp head at least 35 cm above the worktop. work surface.
- Place the lamp on the opposite side to the hand that is holding the mouse or writing.
- Use lamps with asymmetrical lighting to reduce eyestrain, which can lead to eye irritation, headaches, loss of concentration, reduced productivity, etc.
- Position the lamp so that it is easy to adjust and so that the light is in the right place.
- Avoid reflections from shiny surfaces.
- Limit direct glare from bright light in the field of vision and indirect glare from bright light in the field of vision. in the field of vision and indirect glare from the reflection of light from the reflection of light in the field of vision, on a work surface walls or objects.

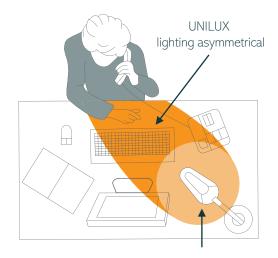

Standard lighting symmetrical

OUR CERTIFICATIONS

Unilux is committed to an eco-responsible approach and ensures that its products respect this commitment. Indeed, we are very concerned about current environmental issues and we aspire to respond as best as possible to the concerns of our consumers on this subject. Sustainable development is at the heart of our strategy and we act for the environment. You will find below the different certifications that Unilux has and that prove its environmental commitment.















USER GUIDE

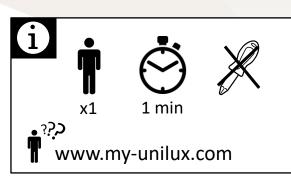

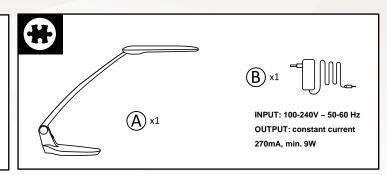

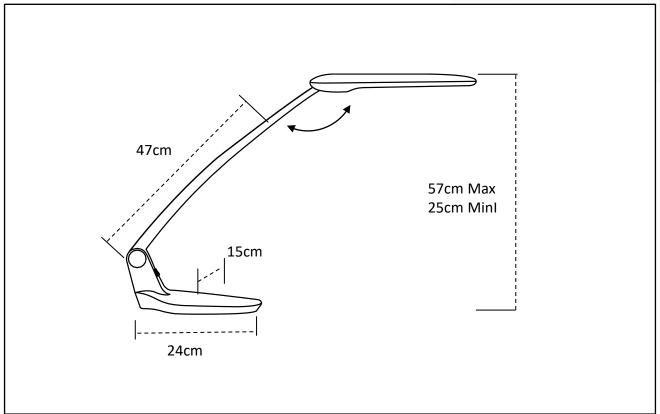

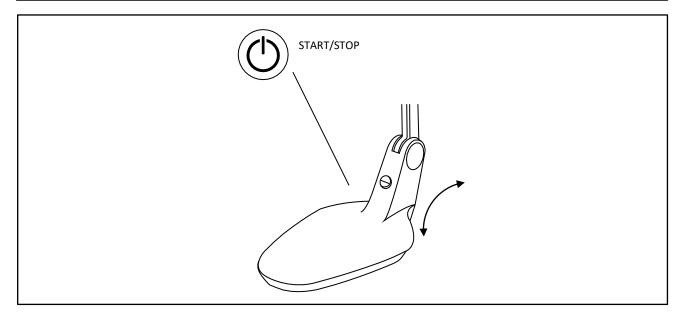




30 products available on pCon Planner

You will be able to obtain data on many UNILUX or OFML standard products and integrate them quickly and easily into 3D space layouts via pCon.



Download on our E-shop





Do you have any questions?

Our after-sales service is always at your disposal Tèl: +33 1 81 86 06 03 E-mail: contact.unilux@hamelinbrands.com

17 avenue du Parc TECHNOPOLIS 91380 Chilly Mazarin – France Tèl: +33 1 81 86 06 00

www.my-unilyx.com

E-mail: contact.unilux@hamelinbrands.com

